

- 1 - Using a large commercial washer without agitator, wash the cover using 1/4 cup of Simple Green All-Purpose Cleaner. Put the cover in the washer and pour the cleaner in the tub after it's filled with warm water or, for some wall mounted commercial units pour it directly in the machine, then put in the cover and start the machine. Use a "gentle" cycle if available.
- 2 - Rinse the cover twice (2X) to remove all the cleaner.
- 3 - Air dry.

A cover may also be cleaned by turning it inside-out on the vehicle.

- 1 - Mix one ounce Simple Green All-Purpose Cleaner per quart of warm water.
- 2 - Spray or sponge onto cover.
- 3 - Rinse with plain water (until no suds) and allow to air dry.

simple green Simple Green is available in most world markets. If you have any questions, or visit their web-site...www.australia.simplegreen.com

OPTIONAL LOCKING DEVICE

Your new cover is equipped with plastic (non-scratch) grommets, reinforced into the bottom edge on both sides of the cover. A plastic-coated, steel cable with padlock and keys is available to lock through the grommets and secure the cover to the vehicle. Consult your dealer for availability.

An added theft deterrent is the application of large letters on the sides of the cover. Print your name or license number on the cover to make it uninviting to a prospective thief. (Note - see warning for use of ink and markers)

LIMITED FOUR (4) YEAR WARRANTY

NOAH® fabric covers are warranted for four (4) years from date of purchase to the original purchaser. Save your receipt! Warranty coverage protects against defects in material and workmanship, as well as the fabric becoming unserviceable during normal use. After factory inspection, we will repair or replace the cover **or** specific panels judged to be unusable. Warranty **does not** cover fading, which occurs naturally on all products used outdoors. This fabric is not waterproof - it is breathable to allow moisture, condensation and heat to escape from under the fabric.

To process your warranty claim, contact:

STORMCOVERS AUSTRALIA PTY LTD
 UNIT 2 / 37 PREMIER CIRCUIT
 WARANA
 QLD - 4575 - AUSTRALIA
orders@coverworld.com.au | 07 5493 1400

**Keep your original invoice
 as proof of purchase**

NOTE - Car covers are not designed for use when towing. Serious damage can occur to the cover and the paint surface of the vehicle may also be damaged. If you use a cover for towing, you do so at your own risk.

Form # 1320581 NH (2/10)




Your new custom cover made with NOAH® barrier fabric from Kimberly-Clark uses high-tech bonded 4-layer composite with bi-component sheath core technology for the twin spunbond outer layers, a film barrier layer and a soft bi-component spunbond inner layer. It's highly water resistant but breathable to help protect the vehicle exterior and interior from the elements.

If your vehicle has an outside radio antenna which will not retract flush with the vehicle body, you will have to provide an opening in the cover. We have included a non-corrosive plastic grommet set for the antenna opening.

1) The most accurate way to make an antenna opening is to remove the antenna and install the cover on the vehicle, making sure it is properly aligned and positioned. Using a sharp pencil, punch a hole through the fabric at the antenna location. Be careful to avoid hitting the vehicle finish with the pencil. If the antenna is not easily removed, see procedure #2.

2) Place the cover on the vehicle **except** for the fender or body panel where the antenna is located. For example, if the antenna is located on the front passenger side fender, roll or fold the cover away from the antenna and cover all the remaining area of the vehicle. (**Do not** attempt to place the cover over the top of the antenna.) Center the cover, align both seams with the roof edges and be sure the cover is pulled down evenly over the front and rear bumpers. Carefully unfold the portion of the cover that is next to the antenna and position it next to the base of the antenna. Recheck the overall positioning of the cover to make sure it has not moved on the vehicle. Make sure the cover lies flat over the hood and roof areas of the vehicle. Mark the cover with the location of the antenna base and make a hole with a sharp pencil.


Use sharp scissors to make the hole opening 3/4 inch in diameter and install the grommet as shown in the diagram to the right. The outside grommet ring fit is very tight. Place the cover on a **CLEAN** hard surface, position the the inside grommet through the opening you made and then secure the outside grommet snap-ring in place using a rubber mallet. Do **NOT** use excessive force or the ring can be damaged. Do **NOT** install the grommet with the cover on the vehicle.

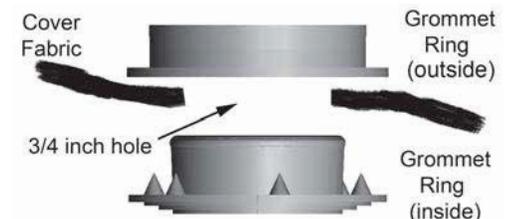

IMPORTANT - When installing the cover, remember to place it over the antenna **before** putting the mirror pockets over the mirrors.

INSTALLATION

The front of the cover is marked with a pattern number and/or logo and the word "front" to help in positioning the cover on the vehicle. If your cover is equipped with mirror pockets (most late-model custom-fit patterns only), it is **very important** that the mirror pockets be placed **over the side mirrors** before the ends of the cover are stretched over the front and rear bumpers. (see Figure "A")

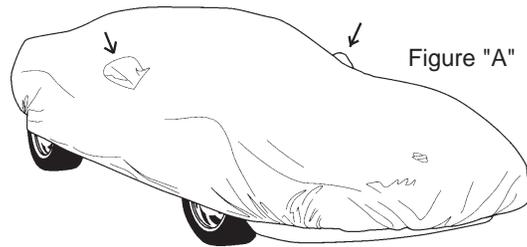


Some vehicles have very sharp bumpers, hood ornaments, moldings, etc. We recommend that you reinforce the inside of the cover at areas exposed to severe abrasion, using cloth-reinforced duct tape or vinyl tape which may be purchased at hardware, plumbing or automotive stores. This will help extend the use of your cover.

REMOVAL

The following procedure will make it easier to remove and install the cover whenever it is used.

- 1) Release both ends of the cover from under the bumpers.
- 2) Fold up both sides onto the top of the vehicle into a long pile approximately 2 feet (60 cm) wide (see Figure "B").
- 3) Start at the front of the vehicle and fold the cover in three foot (1 meter) folds from the front to the back (see Figure "C").

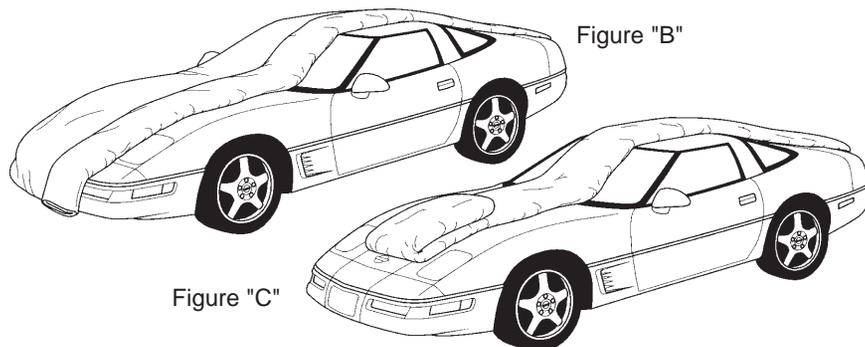

If you use the same procedure each time, you will find it only takes about a minute to install or to remove the cover.

The elastic at each end of the cover will keep the cover in place under normal conditions. A **tie-down rope** is also included - secure it through the loops sewn into the hem under the driver and passenger doors if needed. Use care in installing the cover on a car which has just been driven to be sure the material does not come in contact with hot exhaust pipes.

IMPORTANT WARNINGS - PLEASE READ BEFORE USING COVER!

WARNING TO OWNERS OF REPAINTED VEHICLES: Use of a cover on any recently painted surface may cause damage to that surface! If your vehicle has been repainted check with the painter or body shop on the specifics of how and when you can use this cover.

WARNING FOR USE IN HIGH WIND AREAS: When using this cover in high wind areas (and for prolonged storage), use the loops and rope provided to securely pull the cover tight under the center of the car. This should be done even if the optional lock and cable is being used. The cover is not designed to replace a garage and should be checked for flapping in high winds. If wind gets under the cover it can cause it to work loose and come off the vehicle.

WARNING FOR FREEZING WEATHER: In very rare cases when a heavy rainstorm is followed by an extreme temperature drop to below freezing, it is possible for the cover to become frozen to a layer of ice created between the vehicle body and the cover. **Do not** attempt to remove the cover if this happens. If it is necessary to remove the cover, we recommend pouring warm water over the vehicle and slowly removing the cover, taking care to inspect the surfaces of both the cover and the vehicle during the removal process. Stop immediately if you encounter resistance - the ice has not been melted completely and you must pour more warm water over the vehicle.

PERSONALIZED MARKING INSTRUCTIONS: The application of large letters and/or numbers on the side or front of the cover showing the vehicle's license plate or name(s) is one of the best methods for protecting your cover against theft. If you choose to put identification markings on your cover, please note the following:

- DO NOT use regular or spray paint!
- DO NOT use laundry markers or "permanent" type Magic markers.
- DO NOT use any type of felt-tip pen or marker.

The only type of marking paint that is acceptable for use on cover material is a permanent type fabric/T-shirt paint. This paint is readily available in a variety of colors at most fabric and art supply stores. Follow the manufacturer's instructions. Use a single coating of the fabric paint for marking the outside of the cover with your personalized markings.

WARNING - Markers and regular paint will not adhere to the fabric and can transfer their color onto the vehicle finish.

HAZING OF WINDOWS AND PAINT: Airborne pollutants may be deposited on the windows or paint while a vehicle is being driven or when parked uncovered. These deposits may become smeared and create a haze when the cover is used. The haze can be wiped off with a damp cloth or washed off with water.

CLEANING INSTRUCTIONS

Car cover fabric performance can be severely affected by dirt that builds up on and within the material. It can cause the windshield and paint to become dirty and "fogged" as well as create "wicking" where it actually helps pull water through the fabric, nullifying any water resistant properties the fabric may have had. Cleaning your cover will help to keep your vehicle clean and to increase the service life of the cover.

- NEVER...Clean a car cover in a washer with a center agitator.
- NEVER...Use fabric softener.
- NEVER...Dry a non-woven or specialty type cover in a dryer.