



TONNEAU INSTALLATION INSTRUCTION

Ford Courier Dual Cab No Sports Bars, 1999 - 2006

Part number: STO-120

Package includes

| | |
|--|----------------------------|
| 1 X Tonneau cover | 2 x Bar Brackets (300474) |
| 1 x Tonneau Support Bar - Bar Adjustable | 24 x Rivets (300482) |
| 3 x Aluminium Rope Track-484mm long ea. | 1 x Lock Bracket |
| 1 x Support Bar Sheath | 12 x Rope Buttons (300473) |
| 1 x Fitting Instructions | 4 x Dowel |
| 1 x Warranty Card | |
| | |

Please read instructions carefully before fitting your soft tonneau cover
This cover fitting kit is for new installations for vehicles that do not
Have existing buttons on the ute tub

Table of Contents

| | |
|--|---|
| 1. TONNEAU COVER FITTING | 3 |
| 1.1 BASIC TOOL REQUIRED..... | 3 |
| 1.2 TONNEAU COVER INSTALLATION PROCEDURE | 3 |
| 2. TONNO LOCK..... | 4 |
| 2.1 BASIC TOOL REQUIRED..... | 5 |
| 2.2 TONNO LOCK CONTENTS..... | 5 |
| 2.3 FITTING TONNO LOCK | 5 |
| 3. MULTI-FIT SUPPORT BAR | 5 |
| 2.1 BASIC TOOL REQUIRED..... | 5 |
| 2.2 MULTI-FIT SUPPORT BAR CONTENTS..... | 5 |
| 2.3 FITTING MULTI-FIT BAR | 6 |

1. TONNEAU COVER FITTING

NOTE

Read entire instructions prior to start.

1.1 BASIC TOOL REQUIRED


Drill, 4mm Drill Bit, Rivet Gun, Marking Pencil / Pen

1.2 TONNEAU COVER INSTALLATION PROCEDURE

1. Using two pieces of dowel, join the 3 aluminum rope tracks together. Place the other 2 pieces of dowel in the ends of the now joined rope track.
2. Rest the aluminium rope track on the side rails, and push forward to the vertical face of the tub. Figure 1

Insert a dowel [J] half way into each end of the rope track [E].

Ensuring the rounded section (1) of the rope track faces away the cabin, sit the rope track against the front (cabin end) inside vertical surface of the tub (2) & centralize the rope track.

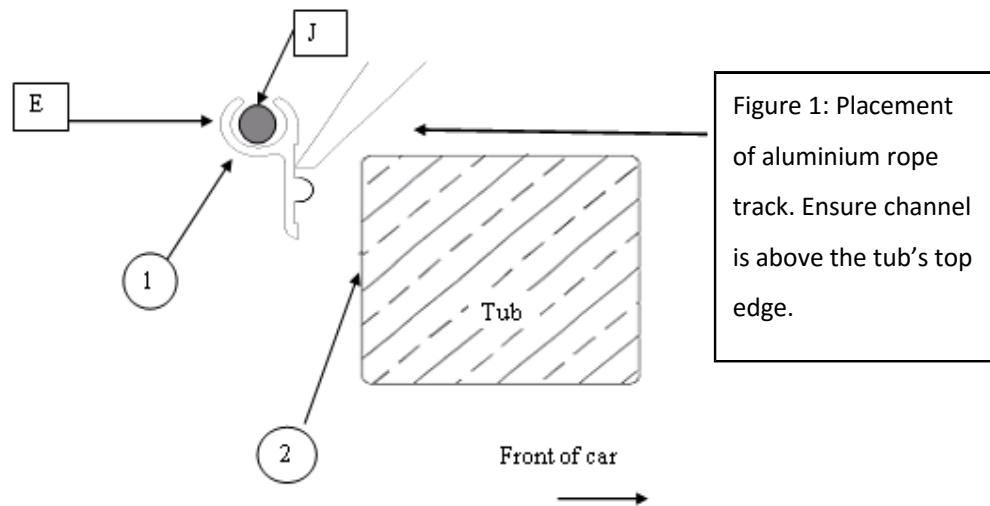

3. Using a 4 mm drill bit, drill 6 holes 50mm from the end of each of the aluminium rope tracks into the front of tub.
4. Once all the holes have been drilled, remove the dowelling pieces. Squeeze silicon sealant along the back of the rope tracks and pop rivet into place.
5. Slide the front of the tonneau cover through the aluminium rope track section
6. To fit the bar brackets, measure 765mm back from the inside front edge at the top of the tub and place them as shown in Figure 2. (5mm down from top edge of tub) Drill and rivet using

two large rivets for each Bar Bracket. Install the support bar according to the supplied instructions.

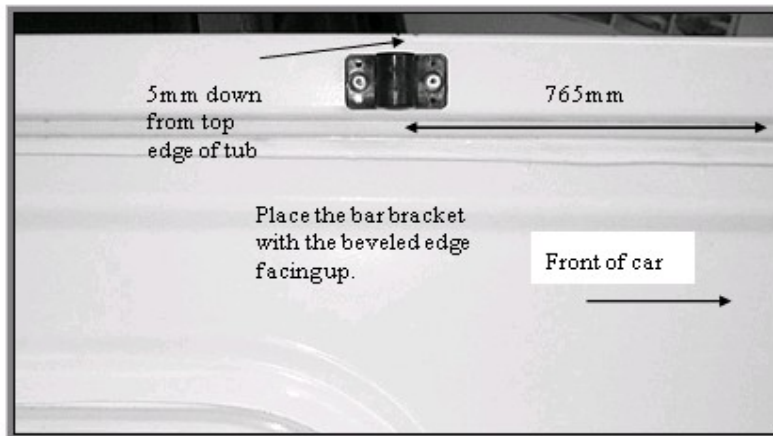


Figure 2: Placement of bar bracket

7. To fit the round buttons (body hooks) to the tub, drape tonneau cover support bar & tub, using the seam on both the tailgate and the side panels as a line of reference.

Tailgate: Using the lower edge of the seam as the reference line; line up each hook individually to each bunji (loop) and drill and rivet the round buttons in line with the lower edge.

Side panels: Line up each hook individually to each bunji (loop), alternating from side to side, this time using the upper edge of the seam as the reference line. Drill and rivet the round buttons.

2. TONNO LOCK

The Tonno Lock is now a standard feature included with all Coverworld Tonneaus. The Tonno Lock is situated at the front of the tonneau cover, so as not to impede the accessibility of the Tonneau.

Fitting the lock is simple and only requires a small attachment on the inside edge of the tub behind the cab.

Together with a padlock, it provides you with an extremely effective theft deterrent. The Tonno Lock is designed to suit

all utes and prevent thieves stealing your Coverworld Tonneau, so you can continue to rely on the Tonneaus' name to give you what you want in a tonneau cover.



2.1 BASIC TOOL REQUIRED

Rivet gun, Drill, Torch, and Marking Pencil/Pen.

You will need to buy a small Padlock- make sure the padlock will go through the hole on the Tonno lock.

2.2 TONNO LOCK CONTENTS

- 2 X 4MM Aluminium rivets
- 1 x Tonno Lock bracket

2.3 FITTING TONNO LOCK

1. Attach the black lock bracket to the bracket on the tonneau with your padlock, and fit the tarp.
2. Getting under the tarp with a torch, place the lock bracket against the body and mark holes with a pen.
3. Remove tonneau and drill the marks with a 4 mm drill bit, place the lock bracket in position and rivet.

3. MULTI-FIT SUPPORT BAR

The Tonneau Multi - Fit Support Bar is designed to fit almost all Utes on the Market, from Suburu Brumbys to Cab Chassis aluminium trays.

Part No: BARADJ



2.1 BASIC TOOL REQUIRED

Drill, 4mm drill bit



2.2 MULTI-FIT SUPPORT BAR CONTENTS

- 1 x hollow bar centrepiece
- 2 x grub screws
- 2 x solid bar end piece
- 1 x Tonneau bar sheath

2.3 FITTING MULTI-FIT BAR

1. Insert solid bar pieces into either end of hollow tube. Adjust bar so it fits between bar bracket holders with the holes facing to the ground (so the grub screws don't rub against the tonneau), as shown above and then with a white pencil make a mark through the small holes of the hollow bar onto the solid ends. This is where you will drill a hole to the depth of about 1-2mm (do not go any further)
2. Join the pieces back together and screw grub screws through the hollow bar into the holes that you drilled. **Make sure you do not over tighten the grub screws.** Then place the tonneau sheath over the bar to stop the bar wearing against the tonneau. Refit the bar. You may kink the bar in the middle to give it some extra height to assist with water runoff.

Warning if you do not fit the tonneau sheath over the bar, the tonneau cover will quickly wear through which is not covered by warranty.

Your Soft Tonneau is now ready for work.

