



## **TONNEAU-UCDTFD350B**

### **AU, BA, BF FORD FALCON UTE with SPORTSBARS** **TONNEAU COVER FITTING INSTRUCTIONS**

**Please read all the instructions before commencing your installation.**

**Also to check that you have ordered and received the correct cover with help hold the cover in position to check its fit.**

**This cover is designed to fit to factory installed buttons**

#### **CONTENTS**

<b><u>DESCRIPTION</u></b>	<b><u>QTY</u></b>	<b><u>TOOLS REQUIRED</u></b>
TONNEAU COVER	x 1	3MM ALLEN KEY
UNIVERSAL SUPPORT BAR KIT	X 2	
SUPPORT BAR COVERALL	X 2	

**NOTE:** Before you begin it is highly recommended that the vehicle is cleaned

Cover is designed for FACTORY sports bars and fits to FACTORY installed Buttons

## **STEP 1: ASSEMBLE AND FIT OF THE SUPPORT BAR**

Note : Falcons come factory standard with support bars but the bars supplied by UTE COVERS DIRECT will fit the existing brackets and will give the best fit and appearance.

### **CONTENTS OF EACH KIT**

1 X HOLLOW BAR CENTERPIECE  
2 X SOLID BAR END PIECE

2 X GRUB SCREWS  
1 X BAR SOCK

### **ASSEMBLY PROCEDURE FOR UNIVERSAL SUPPORT BAR**


1. Insert solid bar pieces into either end of hollow tube. Adjust the bar so it fits between the bar bracket holders with the holes facing towards the ground (this is to ensure the grub screws do not rub against the tonneau cover), Finger tighten the grub screws into position then using a 3mm Allen key tighten a further ¼ turn (DO NOT OVERTIGHTEN AS THIS WILL STRIP THE GRUB SCREW THREAD).
2. Place the bar sock over the support bar this will stop the bar wearing against your tonneau cover. WARNING: FAILURE TO FIT THE BAR SOCK OVER THE BAR WILL CAUSE UNNECESSARY WEAR OF YOUR TONNEAU COVER AND VOID THE WARRANTY.
3. Fit bar into bar brackets.

## **STEP 2: FITTING THE TONNEAU.**

Neatly spread the tonneau cover over the support bars, so it is centred and fully covers the tub.

Gently push the front edge of the tonneau over the front edge of the tub and down so the plastic extrusion clips onto the front edge of the tub.

Now use the bunji loops attach the sides and rear.

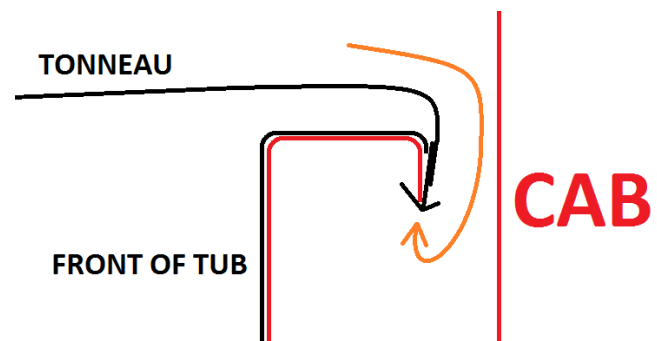

### **CARING FOR YOUR TONNEAU.**

Apply bee's wax or Dry-Lube to the stitching a few times a year, as this will maintain the Tonneau's waterproofing ability and prevent the stitching from degrading. Use a mild detergent and soft scrubbing bush to clean the tonneau cover.

**NEVER DRIVE WITHOUT TONNEAU SUPPORT BARS IN PLACE AS FLAPPING WILL CAUSE A UNDUE STRESS ON THE BUNJIS AND TONNEAU MATERIAL.**

**WARNING: TONNEAU IS NOT DESIGNED TO BE USED AS A LOAD RESTRAINT.**

**Thank you for purchasing an Australian made tonneau from Coverworld**